

Instruction Manual

Commando Traveler/30-Day Calendar



Table of Contents

Crafted for Life.	2
Watch Components	3
Operating Instructions	
Identify Your Watch	4
Setting the Time and Date	6
Traveler Series Watches.	7
30-Day Calendar Series Watches.	12
Caring For Your Watch.	16
Warranty Information.	17
Warranty Service Instructions	18
Registration Form.	19

Crafted For Life

Delémont, Switzerland 1893

Over a century ago, Wenger built a factory in this tiny Swiss village and transformed it into production headquarters for the Genuine Swiss Army Knife™ still used by the Swiss Army today. As it was 100 years ago, each tool, implement and knife manufactured by Wenger is crafted by hand in solid stainless steel and each individually inspected for quality and craftsmanship. This same attention to detail has been applied to genuine Wenger watches. Wenger watches are Swiss-designed, -engineered and -crafted with only the most accurate Swiss movement available. Each watch is constructed with form and function that last a lifetime. As with the genuine Swiss Army knife, Wenger watches are durable, high quality, and versatile enough for use on any occasion. Wenger watches are engineered to provide the same resourcefulness as the genuine Swiss Army knife, supplying functionality beyond the everyday.

Wenger Watch Components

Movements – Swiss quartz movements. Some models feature a jeweled movement with a 12-hour chronograph function.

Case Body – All stainless steel for quality and durability.

Water-Resistant – To 100m (330').

Straps/Bracelets – Stainless steel bracelets featuring dive buckles and safety clasps. Straps are leather-lined.

Luminous Markers – Hands, markers, and numerals may be overlaid with Super Luminova® a luminous material which recharges in seconds when exposed to direct sunlight for improved, extended nighttime visibility.

Crystals – The crystal is the clear surface which covers the watch dial.

Crowns – Crowns are stainless steel knobs on the sides of the case body used to set the date and time or rotate the internal bezel.

Identify Your Watch

This manual includes instructions for three different collections of watches. Use these next three pages as a visual reference to guide you to the appropriate sections of the manual.

Traveler Series

Setting the Time and Date.	6
Setting the Second Time Zone.	8



30-Day Calendar Series

Setting the Time and Date	6
Setting the Second Time Zone	13
Setting the Day and Date on the Internal Rotating Bezel	14



Setting the Time and Date

1. Pull out the 4:00 crown to Position 2 (one “click” out). Rotate crown clockwise until the date shows one day earlier than the date you want to set.
2. Pull out the 4:00 crown to Position 3 (two “clicks” out). Rotate crown clockwise until the current date shows. Then set the watch hands to the correct time. Turn the watch hands past 12 once if you’re setting the watch for a P.M. time.
3. Return the crown to the fully depressed position.

Position 1



Position 2



Position 3



Traveler Series



Setting the Time and Date

Follow instructions on p.6.

Setting the Second Time Zone

Important note: If the crown of your watch does not pull directly out, then you may have a watch with a screw-down crown. Rotate the crown counterclockwise until the crown moves away from the watch. This will set the crown in Position 1. Always screw down the crown after making any adjustments. This is very important as the screw-down crown assures water resistance.

1. Rotate the 2:00 crown counterclockwise until the crown moves away from the watch. This will set the crown in Position 2.
2. Rotate the 2:00 crown (be patient, it's not as easy to rotate as the 4:00 crown) clockwise until a city in the same time zone as your local time zone appears (e.g., Central Europe = Paris).

Position 1



Position 2



3. Pull out the 4:00 crown to Position 2 (one “click” out). Rotate the 4:00 crown counterclockwise to set the hour hand to the local time on the 24-hour inner bezel.

Note: The inner bezel has a 24-hour display. Therefore, when setting the local time, make sure that 8 a.m. is set as 08.00 and 8 p.m. is set as 20.00.

4. Rotate the 2:00 crown once more until a city in the desired time zone appears in the cut-out at the 9 o'clock position of the dial.
5. The second time zone hand will now indicate the time for this time zone. This hand rotates once every 24 hours and indicates the time on the 24-hour display of the outer bezel.

Checking Additional Time Zones

Once the watch has been set as described, you can check other time zones at any time by rotating the 2:00 crown.

Note: Certain time zones do not recognize daylight saving time (DST). You must take this difference of +/- one hour into account when reading the second time zone or whenever you set the second time zone (see table on p.10-11).

The 24 Time Zones on the Inner Bezel

City	Time Zone	DST
London	=Greenwich Mean Time (GMT)	yes
Paris	+1h	yes
Cairo	+2h	yes
Moscow	+3h	yes
Abu Dhabi	+4h	no
Karachi	+5h	no
Dhaka	+6h	no
Bangkok	+7h	no
Hong Kong	+8h	no
Tokyo	+9h	no
Sydney	+10h	yes
Noumea	+11h	no

City	Time Zone	DST
Auckland	+12h	yes
Samoa	-11h	no
Honolulu	-10h	no
Anchorage	-9h	yes
Los Angeles	-8h	yes
Denver	-7h	yes
Chicago	-6h	yes
New York	-5h	yes
Caracas	-4h	yes
Rio	-3h	yes
Azores	-1h	yes
Reykjavik	-0h	no

30-Day Calendar Series



Setting the Time and Date

Follow instructions on p.6.

Setting the Second Time Zone

1. Pull out the 4:00 crown to Position 2 (one “click” out). Rotate crown counterclockwise to set the second time zone hand to the local time on the 24-hour second time zone inner dial.
2. Return the crown to the fully depressed position.

Note: The inner dial has a 24-hour/military time display. Therefore, when setting the local time, make sure that, as an example, 8 a.m. is set as 08.00 and 8 p.m. is set as 20.00.

Position 1



Position 2



Position 1



Position 2



Setting the Day and Date on the Inner Rotating Bezel

Important note: The 2:00 crown screws down to prevent accidental reset. Rotate the crown counterclockwise until the crown moves away from the watch. Always screw down the crown after making any adjustments. This is very important as the screw-down crown assures water resistance.

1. Rotate the 2:00 crown counterclockwise until it moves away from the watch. This will set the crown to Position 2.

2. Using the 2:00 crown, rotate the inner bezel to set the calendar date "1" opposite the corresponding day of the week on the outer bezel. (e.g. if December 1st is a Monday, rotate the inner bezel to set the calendar date "1" opposite "MO" on the outer bezel. Now it's easy to see, as an example, that December 25th lands on a Thursday and the 31st is on a Wednesday.)
3. Return the crown to the fully depressed Position 1, assuring the crown has been screwed down.

Caring For Your Watch

Even though your watch is water-resistant, it is not recommended that you wear it in a hot shower, sauna or hot tub. We suggest sending your Wenger watch to our Customer Service Center for battery replacement (please see procedure under "Warranty Service"). Batteries should only be replaced by a professional jeweler to maintain the watch's water-resistancy. If your watch has a bracelet, we suggest you see a jeweler for any sizing adjustments.

3-Year Limited Warranty

Wenger is proud to stand by our quality Swiss craftsmanship with a 3-Year Limited Warranty. This Wenger watch is warranted to the original consumer/purchaser against breakage or malfunction under normal use due to defects in material or workmanship. This 3-Year Limited Warranty also includes all components and craftsmanship of the Swiss movement and watch case. We will repair, or at our option, replace any defective Wenger watch with the same or comparable model. We will refund the purchase if repair or replacement is not commercially possible. The warranty will become null and void if the timepiece is misused, abused, tampered with or taken apart, or if the timepiece is repaired by anyone other than an authorized dealer. The warranty is not extended to the watch strap, bracelet, finish, crystal or battery. The warranty does not cover any incidental, consequential or special damage arising from any or all uses of the Wenger watch. Wenger watches must be repaired by an authorized dealer or the warranty is void. Some states do not allow the exclusion or limitations of incidental, consequential or special damages, so the above limitations may not apply.

Warranty Service

In the United States, please send your watch to: WWRC, 15 Corporate Drive, Orangeburg, NY 10962. Please include a check or money order payable to Wenger NA in the amount of \$10(US) to cover the cost of return shipping and handling (California residents exempt). If your warranty has been rendered void as a result of non-compliance with above warranty restrictions, we will send you an estimate before any repairs are made. When sending your watch to our Service Center, please pack it securely. We suggest insuring the shipment as Wenger NA cannot be responsible for packages not received by the company. Be sure to include your name, mailing address, phone number, email address, proof of purchase and a brief description of the problem. Wenger is not responsible for damage or loss in shipping. Note: Do not send watch boxes. If you have questions or concerns, please call 800-267-3577 or 800-447-7422 to speak to a Customer Care Associate. You may also visit us on the web at www.WengerNA.com or contact us via e-mail at Custsvc@WengerNA.com. In Canada call: 888-838-1504. Outside the U.S. or Canada, please visit www.Wenger.ch for further instructions.

Wenger Watch Registration

For your convenience, you can **register online** at www.WengerNA.com/warranty or complete the form below and mail it to the address on the back.

Name/Nombre: _____

Address/Dirección: _____

City/Cuidad: _____

State/Estado: _____ Zip Code/Código Postal: _____

Email: _____

Date Acquired/Fecha de Adquisición: _____

Gift/Regalo Purchase/Compre

Where Purchased/Lugar de Compre: _____

Notes: _____

Wenger N.A.

15 Corporate Drive · Orangeburg, NY · 10962 · USA

Tel: 800-431-2996, 845-365-3500

Fax: 845-425-4700 (General correspondence)

845-365-3743 (Orders only)

Web: www.WengerNA.com



MAKER OF THE GENUINE SWISS ARMY KNIFE™